

Purpose

Technique PRTPP24 sets what precipitation data is to be printed for stations that only have daily amounts.

Valid values are NO (0), YES (1) and print observed and estimated (2).

The Global default is NO (0).

This Technique is Universal.

Form of Input

PRTPP24(integer)

where integer is 0, 1 or 2 specifying:

0 = do not print values for daily precipitation stations

1 = print only observed values

2 = print both observed and estimated values

Examples

PRTPP24

The observed values for stations that only have daily amounts will be printed.

PRTPP24(2)

Both observed and estimated amounts will be printed (all stations with only daily amounts will be printed).