

Purpose

Utility ENTERISC is used to determine whether or not proper conditions exist for the Induced Surcharge Scheme to be needed.

Input Summary

No information in addition to general input is needed to use this utility.

If this utility is executed by the RCL an induced surcharge scheme (INDSRCHGE) must be defined at the same level as the executed ENTERISC utility.