

4.0 Component Descriptions

This section of the manual describes the options available in the Display Manager GUI.

Running ESPADP will bring up a Display Manager which contains a GeoViewer and an ESPTrace Manager.

Through this interface the user can select time series for analysis, set preferences, access GIS data or run ancillary functions.

Selection of a trace ensemble (a grouping of ESP output by Segment, data type and interval) will launch a trace display that operates independently from the initial Display Manager. The trace display provides an interface for analysis and display of probabilistic forecasts. Multiple trace displays can be initiated from the Display Manager. Launching two identical trace ensembles will result in two independent trace displays of the same original data.